

# Use and Maintenance Technical Manual

**BIOGENESIS**



Biogenesis S.r.l.  
www.bio-genesis.it

## Portable Fire Extinguisher, 9 L Foam



CLIP DETAIL



- **CYLINDER**  
In high-strength alloy steel, deep drawing, with clip, external powder painting Red Ral 3000.
- **EXTINGUISHING AGENT**  
Water-based foam.
- **PROPELLANT**  
Fire extinguisher pressurized at moment of use with gr.75 CO<sub>2</sub> cartridge.
- **VALVE**  
M. 74x2, lightweight aluminum alloy, activation with percussion method.
- **USE**  
A B fire rating  
(solid materials, flammable liquids).
- **BRACKET**  
Wall-mounted bracket for fire extinguisher with clip, red painting, in standard equipment

Note: image is for illustrative purpose only, the product purchased can has some difference

9 L foam fire extinguisher, pressurized at moment of use, temperature range from +5°C to +60°C, manufactured in accordance to **UNI EN 3-7**, certified according to the directive for pressure equipment PED 2014/68/EU.

Manufactured according at productions checks as agreed with **EN 3-10**.


Quality Product certification guaranteed by Bureau Veritas Italia.

Suitable for use on fire involving electrical voltages up to 1'000 V, at a minimum distance of 1 meter.

APPROVED/CERTIFIED FIRE EXTINGUISHER:



For version MED 2014/90/UE:  
cod. 33094-1



**FIRE  
RATING :**



43

233

# Portable Fire Extinguisher, 9 L Foam

## TECHNICAL SPECIFICATIONS

FIRE RATING	43 A 233 B
EXTINGUISHING AGENT	Foam EWAB15 (1,5 % SC-6 + 7 % Inilam AX + 91,5 % Water)
PROPELLANT	Cartridge with gr. 75 CO <sub>2</sub>
TEMPERATURE RANGE	+5°C / +60°C
NOMINAL CHARGE	9 Liters
FULL WEIGHT	~ 14,8 Kg
DIMENSIONS	Height 565 (valve) / 580 (hose) +/- 5 mm Diameter (cylinder) 182 +/- 2 mm
DISCHARGE TIME	~ 52,1 seconds


## MODALITY OF USE



1) REMOVE SAFETY PIN



2) HOLD THE HOSE AND  
PUSH THE RED BUTTON

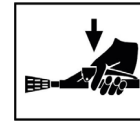

3) SQUEEZE THE LEVER AIM THE  
JET AT BASE OF FIRE

Follow the instructions present on the marking label.

**ATTENTION:** Do not direct the jet at people. If you're dispensing in close spaces, then ventilate the room. The fire extinguisher can be used on fire involving electrical voltages up to 1'000 V, at a distance of 1 meter.

## INSTALLATION AND COMMISSIONING

The installation of the fire extinguisher must be performed according to the rules in force. The fire extinguisher have to be installed in a safe and stable support, with a gripping at a maximum recommended height of 110 cm.

The fire extinguisher must be free of obstructions and marked by an appropriate identifying label.

It is recommended to install it in a dry place, protected from the atmospheric agents.

It is recommended the installation of water-based fire extinguishers for close spaces.

The commissioning of the fire extinguisher for the protection of the area must be carried out by qualified personnel according to the rule in force within 6 months from the date of production and/or placing on the market, reported in the declaration of conformity released by the producer.

## MAINTENANCE PERIODS FOR EFFICIENCY GUARANTEES

The maintaining of the product efficiency have to be carried out from the responsible person.

It is recommended a visual check of the efficiency state every three months since the commissioning time apart if there are different dispositions.

It is advisable to : verify that the fire extinguisher would be in a correct position, safe and stable, free from impediment for the use; identify the fire extinguisher with an appropriate identification sign; make sure of its structural integrity and that is free from any damage; check that the original documentations is available.

Any restoration operations and instrumental checking have to be realized exclusively by qualified personnel who possess the necessary documentations to maintain the constancy of the product performance.

Any tampering or intromission by unauthorized personnel voids the product warranty.